



# **print™** Quick Installation Guide

## Installing Cartridge


- 1 Connect the power cord to the AC adapter.

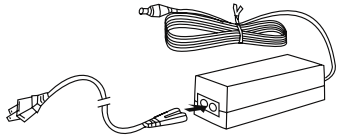


- 2 Connect the AC adapter to the printer's AC adapter terminal & plug the power cord into a power socket.

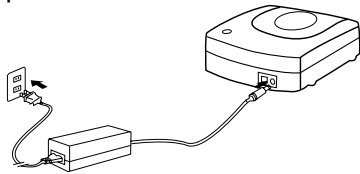

- 3 Connect the USB cable to the USB port of the PC.

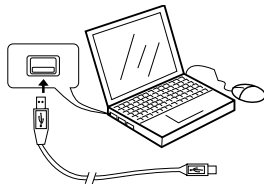


- 4 Connect the USB cable to the USB port of the printer.

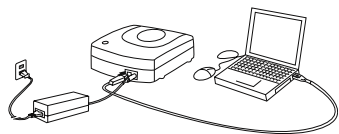



- Do not disconnect the AC Adapter, power cord or USB cable during the printing process as it may cause the printer to malfunction.
- Only use the power cord and AC Adapter supplied with the printer.
- Ensure that you use a standard household power socket rated for the voltage specified on the supplied AC adapter.
- Connect the USB cable directly to the USB port of the PC.
- Connecting through a hub or chaining through another USB device may cause the printer to malfunction.

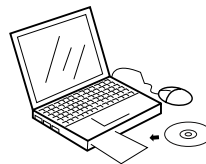- 5 Insert CD-ROM in your PC. (If auto run is disabled, open Windows Explorer and click the CD icon.)



- 6 Follow the instructions on the PC and install the software.


- 7 Restart the computer and double-click the  icon to start the application.

- 1 Click the **'Change Cartridge'** icon  on the CD/DVD Application Window to open a new Window called "Change Cartridge Wizard".


- 2 Click on the "Change Cartridge" button to have the cartridge holder moved to the change cartridge position.

Change Cartridge


- 3 Open the printer access door.

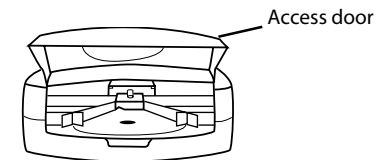

- 4 Position the ribbon cartridges so that the ribbon passes under the cartridge bar.

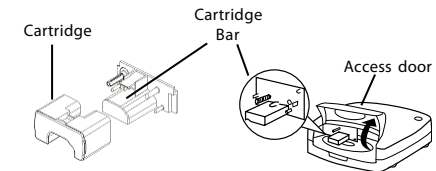

 - 5 Press the ribbon cartridge against the back carriage until the cartridge is in line with the cartridge bar.



- 6 Click the **OK** button on the cartridge dialogue box and the cartridge will move back to the home position, or "Cancel" to exit. Then close the printer access door.