

# System Firmware Update Instruction

- System firmware update is provided available to provide additional features or fix certain issues that may affect an individual system. Please DO NOT apply this update unless it is necessary.
- Firmware updates should not be applied to any other than corresponding Vinpower models. Please consult with Vinpower Digital for compatibility.
- Files are generally zipped. Place the .zip file into its own directory and then use an extraction utility such as WinZip. <http://www.winzip.com/>
- Vinpower Digital will ONLY support the use of firmware that has been obtained from Vinpower Digital such as this one. The use of any Non-Vinpower firmware will invalidate your warranty.

In order to perform the update, you will need a System Update HDD Device.

- **To create a System Update HDD Device utilizing the binary Update Core File provided by Vinpower Digital:**
  1. Insert a blank HDD into the Source Port of the HDD Duplicator.
  2. Format the HDD as an Update HDD Device by Go to "Utilities" -> "Update Firmware" -> "Format Update HDD" menu.
  3. Press "ENT" key to perform the format process.
  4. Once completed, remove and connect the Update HDD Device to your PC via Internal SATA Ports or External HDD Docking Stati
  5. Extract the core update file(s) to your desktop from the zip archive.
  6. Transfer those update file(s) into an Update HDD Device's root folder.
  7. Insert the Update HDD Device into the "Source" port of the HDD Duplicator.
  8. Go to "Utilities" -> "Update Firmware" -> "Update" menu
  9. Press "ENT" key to perform the update process.
  10. Once completed, restart the system when asked to do so.